

# Class 1 SPV – How to apply – South Australia

This information sheet is a quick reference on how to complete the most common South Australia Class 1 SPV vehicle applications through the NHVR Portal at [www.service.nhvr.gov.au](http://www.service.nhvr.gov.au)

**Please note:** This list is only a sample of the available configurations and any Class 1 SPV combination can be submitted to the NHVR Portal.

SPV type	Available network	How to apply for routes off the approved network
 Concrete Pump	<b>40t SPV Network –</b> If all conditions of the National Class 1 Special Purpose Vehicle Notice are met then access is granted for the approved network under the Notice.	<ol style="list-style-type: none"> <li>1. Select "Special Purpose Vehicle (SPV)"</li> <li>2. Select SPV – Vehicle Configuration</li> <li>3. Complete the Length, Width, Height and Total Mass (t)</li> <li>4. Click on the picture of Crane</li> <li>5. Change the component if this is not correct e.g "All terrain crane 5 axle" from the Component drop down list</li> <li>6. Complete Vehicle list and Axle groups</li> <li>7. Click Next to Travel details</li> <li>8. Enter Period From and Period To</li> <li>9. Complete Travel requirements</li> <li>10. Click Next to Route</li> <li>11. Select Network and select SA</li> <li>12. Click Next to Attachments</li> <li>13. Attached 'Certificate of Approval for Road Travel' from DPTI, any clearance letters or supporting documentation</li> <li>14. Complete Contacts section</li> <li>15. Review application and confirm details</li> <li>16. Submit new permit application</li> </ol>
 3 Axle Crane	<b>3 Axle Crane Network –</b> If all conditions of the National Class 1 Special Purpose Vehicle Notice are met then access is granted for the approved network under the Notice.	
 4 Axle Crane	<b>4 Axle Crane Network –</b> Permit required.	
 5 Axle Crane	<b>5 Axle Crane Network –</b> Permit required (network access will be dependent on vehicle dimensions)	
 6 Axle Crane	<b>6 Axle Crane Network –</b> Permit required	